

IMPORTANT NOTES: Read First

(A) Use liquid thread lock (such as Loctite®) with all threaded hardware. **Important:** Liquid thread lock (prior to curing) helps to eliminate the common problem of "thread seizure" in stainless steel hardware by serving as a lubricant during assembly.

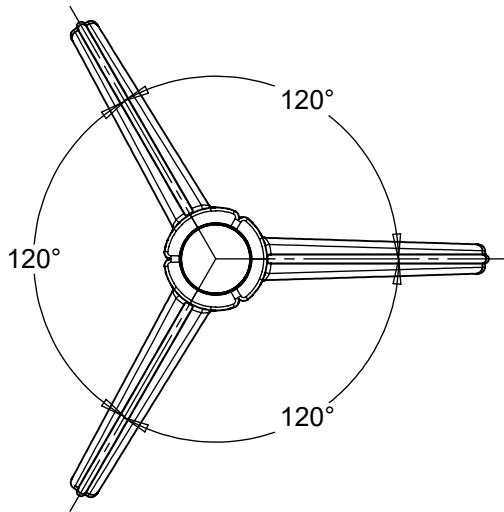


FIGURE 2
 3 Frame Single Post Configuration

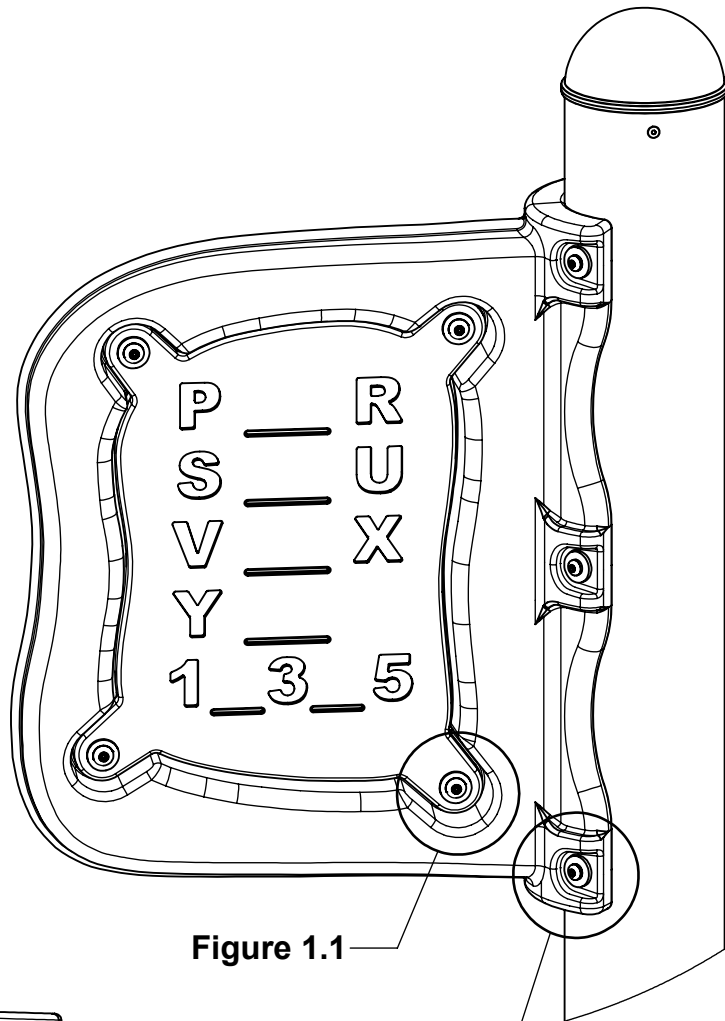


FIGURE 1
 Panel Pal Roto




FIGURE 3
 2 Frame Single Post Configuration

Step 1 (Factory Assembled)

Attach the Panel Pal Insert to the Roto Panel Pal Frame as shown in Figure 1.1. (See Note A)

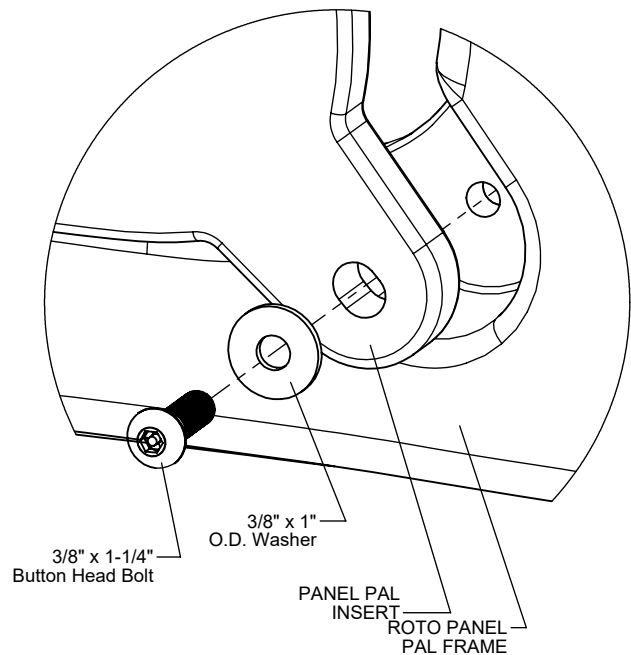


Figure 1.1

Step 2

Attach the Roto Panel Pal Frame to the Post as shown in Figure 1.2. (See Note A)

Step 3

Fully tighten all fasteners according to the "TIGHTENING TORQUE FOR HARDWARE" section of the Installation Manual.

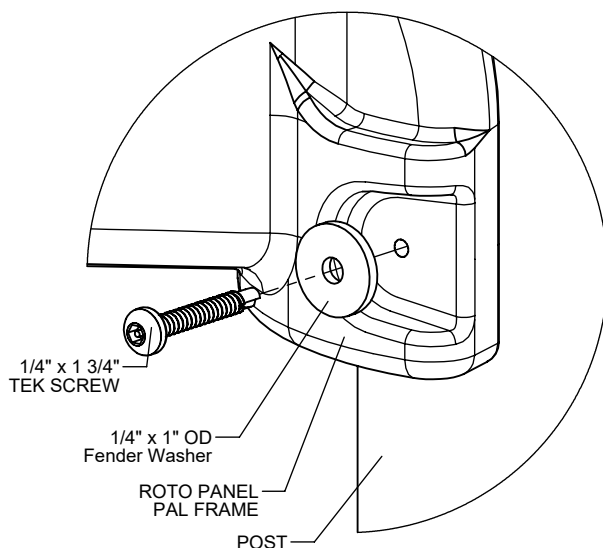


Figure 1.2

PANEL PAL ROTO (Frame) INSTALLATION INSTRUCTIONS

R5-1660
Page 3 of 3

Parts List

Part #	DESCRIPTION	QTY
9271082-TR	1/4" x 1 3/4" Tek Screw	6
9321052-THK	Washer Fender 1/4" x 1" OD x .125" thk	6

Assembled Parts List

Part #	DESCRIPTION	QTY
DF-7278	Roto Panel Pal Frame	1
Varies	Panel Pal Insert	1
9103062-TR	Bolt Button Head 3/8" x 1-1/4"	4
9333002	Washer Flat 3/8" x 1" O.D. x .100" thick	4

Specifications

PANEL PAL ROTO FRAME:

Shall be constructed of UV-stabilized, rotationally molded, linear, low density polyethylene with an average wall thickness of .250".

HARDWARE:

Shall be stainless steel, zinc/nickel plated or galvanized as required to resist rust and corrosion.

Maintenance

Periodically tighten all screws, bolts and nuts. A periodic inspection of all parts is necessary. If a part is broken or worn, replace immediately. For general maintenance please refer to our Playground Maintenance Manual.



www.playcraftsystems.com
For Customer Service Call
800.333.8519 (U.S.A.) or 541.955.9199 (International)

Rev C
2/16/2018