


IMPORTANT NOTES: Read First

(A) Use liquid thread lock (such as Loctite®) with all threaded hardware. **Important:** Liquid thread lock (prior to curing) helps to eliminate the common problem of "thread seizure" in stainless steel hardware by serving as a lubricant during assembly.

(B) Refer to Installation Manual for 09 Collars assembly instructions.

(C) See component installation instructions for collar heights and locations.

FIGURE 1
Single Arm
Event Hanger Hybrid

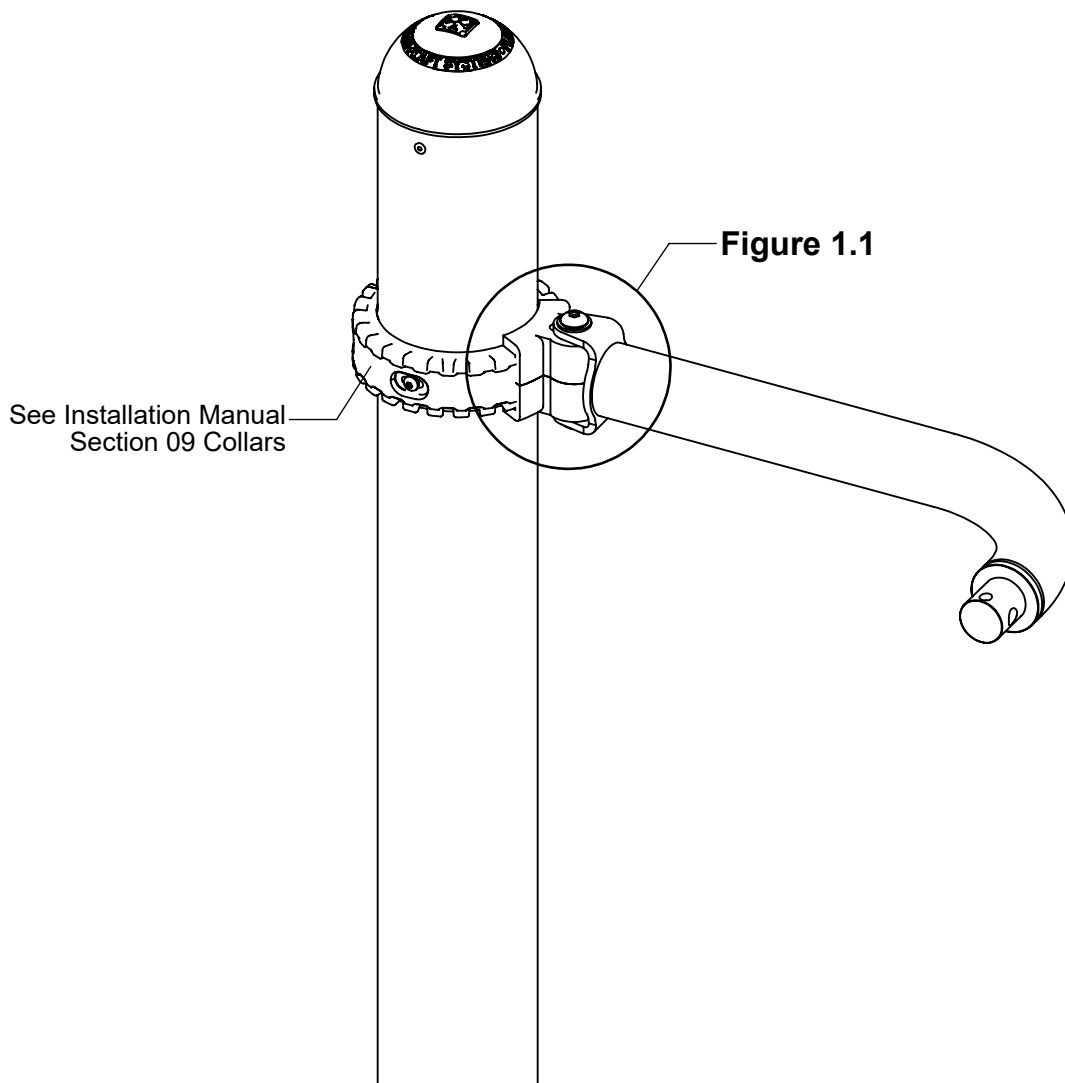

NOTE: RH5 Event Hanger shown. Other configurations will vary slightly, but does not affect assembly.

Step 1

Use component to locate and attach collar as shown in Elevation View. (See Notes B & C)

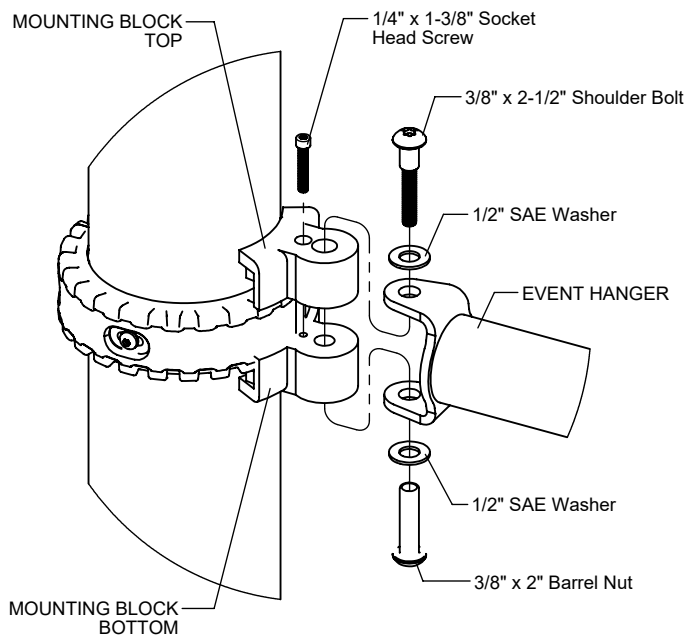
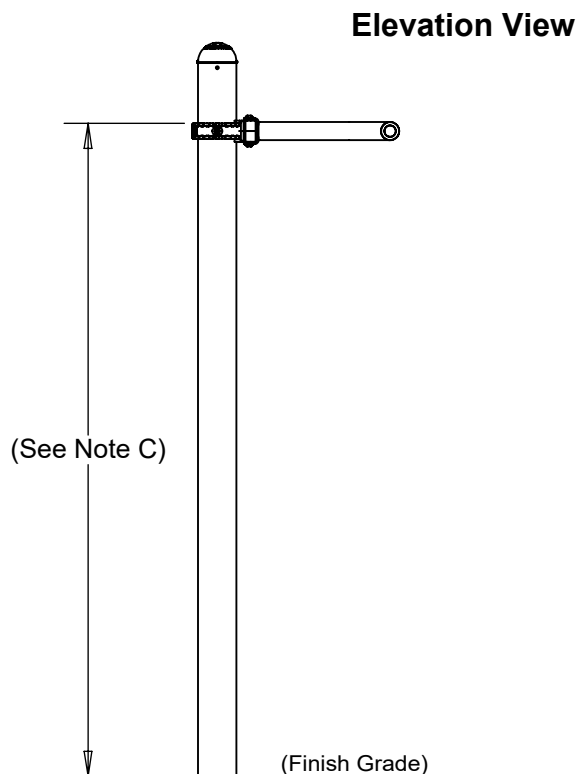


Figure 1.1

Step 2

Attach Event Hanger to collar as shown in Figure 1.1. (See Note A)

Step 3

Fully tighten all fasteners according to the "TIGHTENING TORQUE FOR HARDWARE" section of the Installation Manual.

SINGLE ARM EVENT HANGER HYBRID INSTALLATION INSTRUCTIONS

RH-21004
Page 3 of 3

RH3.5 Parts List

S-21004-RH35		
Part #	DESCRIPTION	QTY
FS-21004-RH35	Event Hanger RH3.5	1
GG-8110	Mounting Block 4 Top R3.5	1
GG-8111	Mounting Block 4 Bottom R3.5	1
9143112-TR	Bolt Shoulder 3/8" x 2-1/2" BH	1
9281062-5-TR	Screw Soc HD 1/4" x 1-3/8"	1
9345002	Washer Flat SAE 1/2"	2
9443092-TR	Nut Barrel 3/8" x 2" BH	1

RH5 Parts List

S-21004-RH5		
Part #	DESCRIPTION	QTY
FS-21004-RH5	Event Hanger RH5	1
GF-7006-B	Mounting Block R5 Bottom	1
GF-7006-T	Mounting Block R5 Top	1
9143112-TR	Bolt Shoulder 3/8" x 2-1/2" BH	1
9281062-5-TR	Screw Soc HD 1/4" x 1-3/8"	1
9345002	Washer Flat SAE 1/2"	2
9443092-TR	Nut Barrel 3/8" x 2" BH	1

Specifications

EVENT HANGER RH:

Shall be fabricated using 2.375" O.D. 10 gauge steel tubing with welded 1/4" thick steel clevis and machined pin and will have a multi-stage baked-on powder coat finish.

MOUNTING BLOCKS:

Shall be two-part and precision die-cast from a high strength aluminum alloy and will have a multi-stage baked-on powder coat finish.

HARDWARE:

Shall be stainless steel, zinc/nickel plated or galvanized as required to resist rust and corrosion.

Maintenance

Periodically tighten all screws, bolts and nuts. A periodic inspection of all parts is necessary. If a part is broken or worn, replace immediately. For general maintenance please refer to our Playground Maintenance Manual.



www.playcraftsystems.com
For Customer Service Call
800.333.8519 (U.S.A.) or 541.955.9199 (International)

Rev B
11/17/2021