


IMPORTANT NOTES: Read First


(A) When installing the Tree House Shed Roof, make sure that the lowest end of the roof is a minimum of 84" [2130mm] above the underlying play surface.

FIGURE 1
Tree House Shed Roof

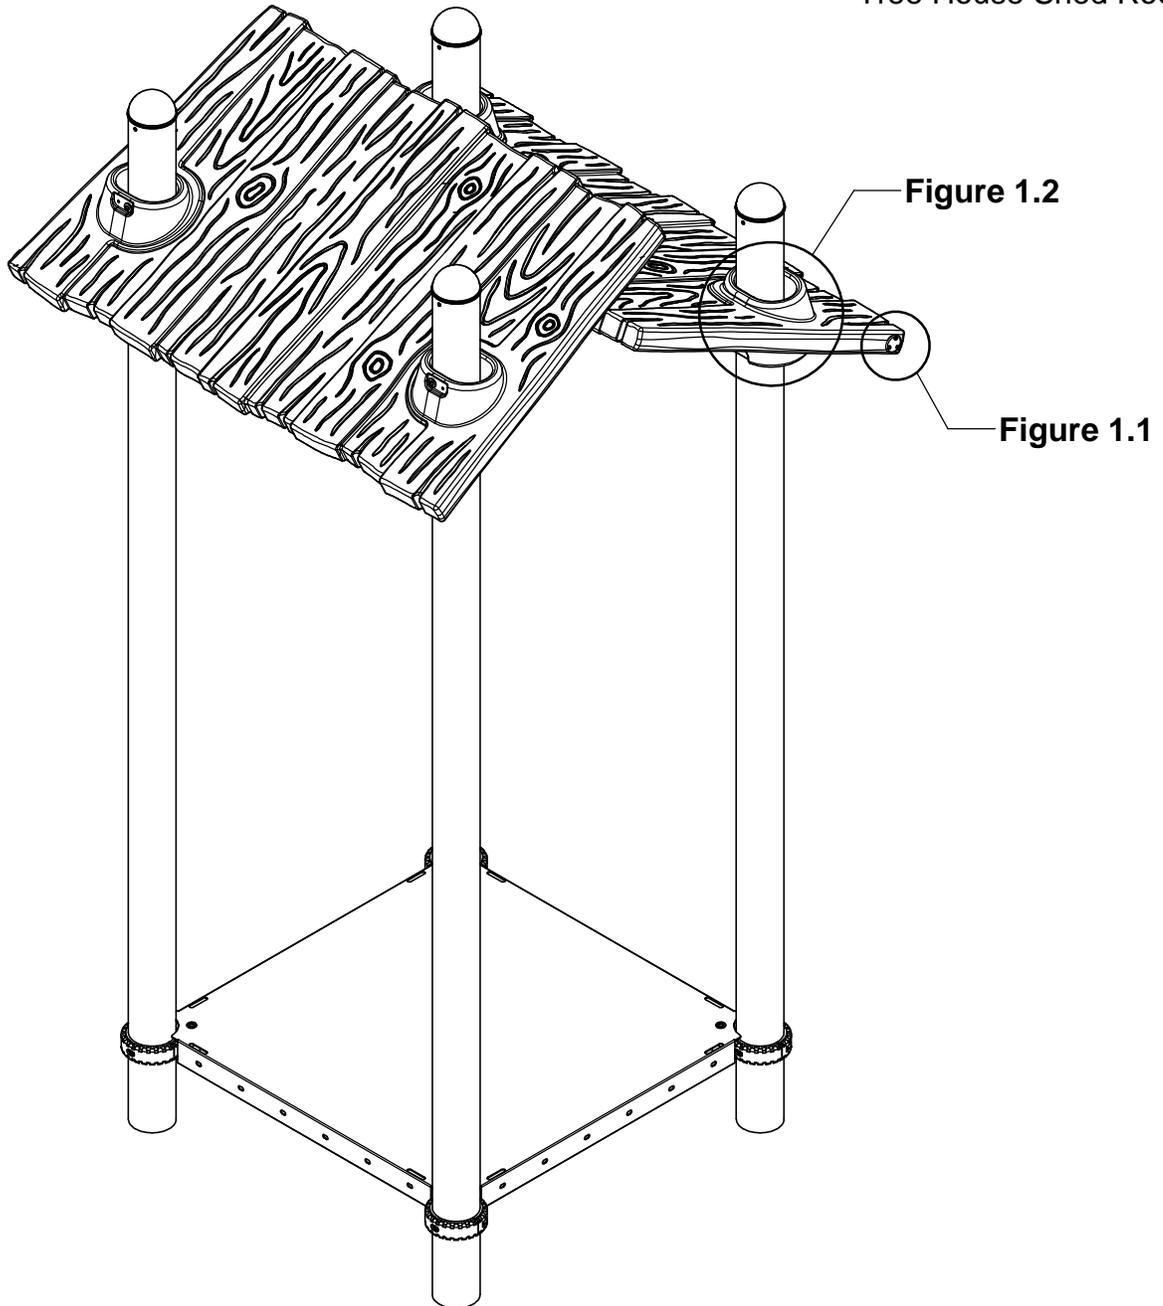

NOTE: Dual Roof configuration shown. Other configurations will vary slightly, but does not affect assembly.

Elevation View

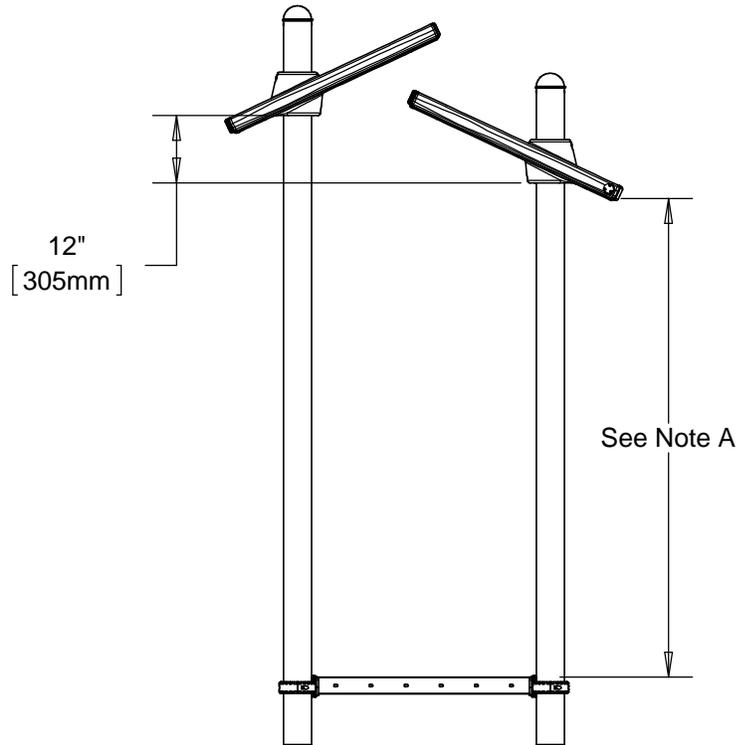

Step 1 (Factory Assembled)

Attach Vent Plug to Tree House Shed Roof as shown in Figure 1.1.

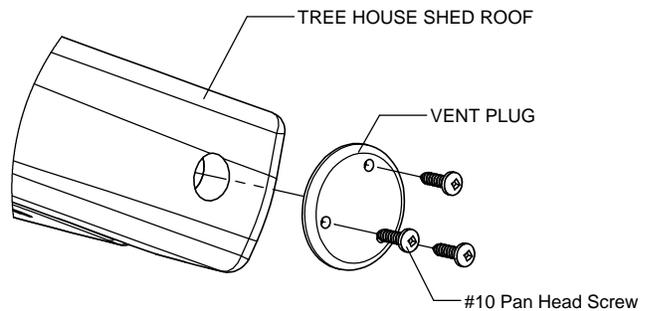


Figure 1.1

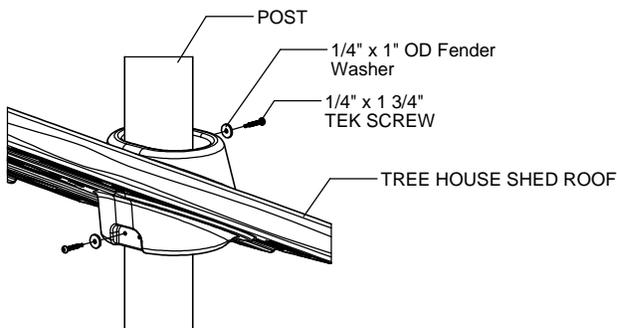


Figure 1.2

Step 2

Refer to Elevation View for heights and attach Tree House Shed Roof to posts as shown in Figure 1.2. (See Note A)

Step 3

Fully tighten all fasteners according to the "TIGHTENING TORQUE FOR HARDWARE" section of the Installation Manual.

TREE HOUSE SHED ROOF INSTALLATION INSTRUCTIONS

R5-18093
Page 3 of 3

Parts List

Part #	DESCRIPTION	QTY.
9271082-TR	1/4" x 1 3/4" Tek Screw	4
9321052-THK	Washer Fender 1/4" x 1" OD x .125" thk	4

Assembled Parts List

Part #	DESCRIPTION	QTY.
DF-0006	Tree House Shed Roof	1
EE-4867	Geo-Wave Vent Plug	1
9251032	Screw SQ #10x3/4 DR PH SMS SS	3

Specifications

TREE HOUSE SHED ROOF:

Shall be constructed of UV-stabilized, rotationally molded, linear, low density polyethylene with an average wall thickness of .250".

HARDWARE:

Shall be stainless steel, zinc/nickel plated or galvanized as required to resist rust and corrosion.

Maintenance

Periodically tighten all screws, bolts and nuts. A periodic inspection of all parts is necessary. If a part is broken or worn, replace immediately. For general maintenance please refer to our Playground Maintenance Manual.



Manufactured by Krauss Craft, Inc.
www.playcraftsystems.com

For Customer Service Call
800.333.8519 (U.S.A.) or
541.955.9199 (International)

Rev C
3/18/2013