

Assembly View

Figure 1



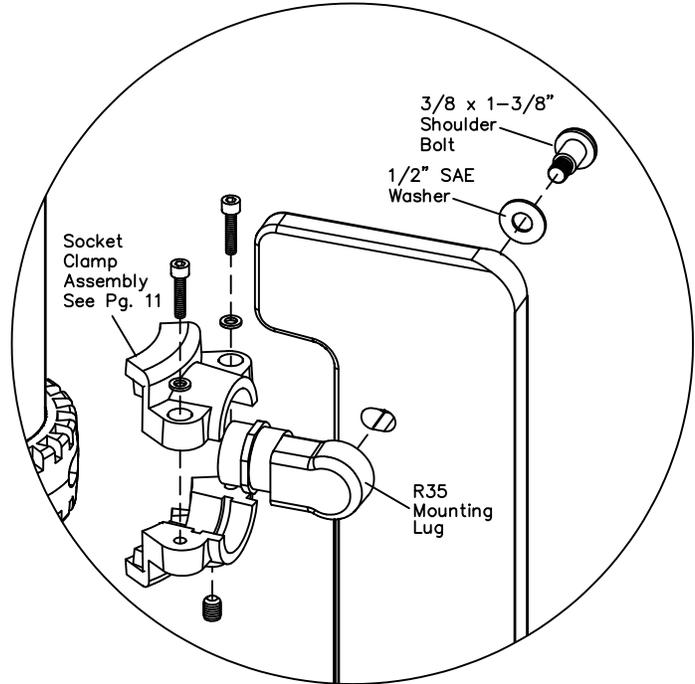


Figure 2

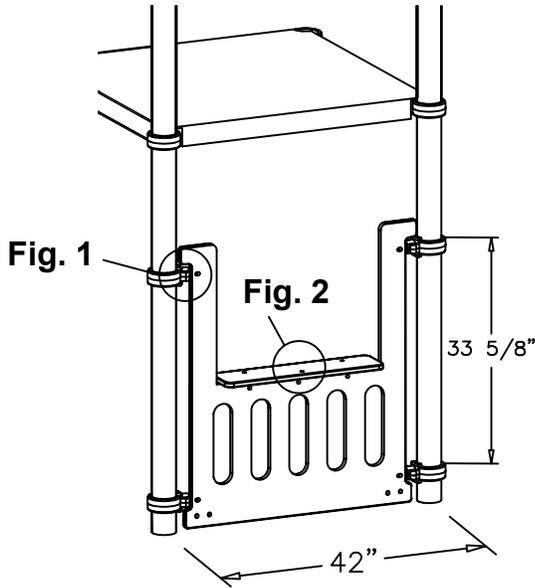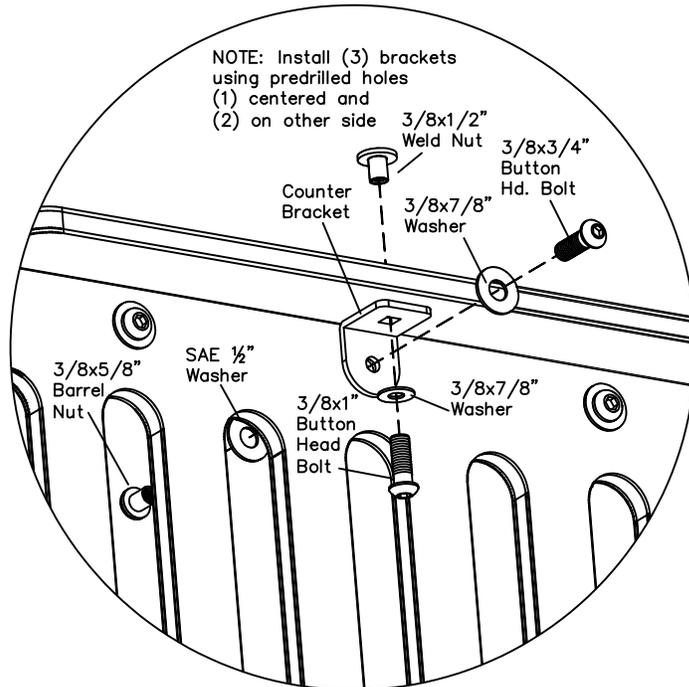

Parts List

<u>QTY.</u>	<u>DESCRIPTION</u>	<u>PART #</u>
1	Open Store Panel w/ Top	8218
4	Socket Clamp Assembly R35	See Pg. 11
4	Mounting Lugs R35	8113
4	3/8 x 1-3/8" Shoulder Bolts	9143062-TR
3	Counter Bracket	4285
3	3/8 x 1" Button Hd. Bolts	9103052-TR
3	3/8 x 3/4" Button Hd. Bolts	9103032-TR
3	3/8 x 5/8" Barrel Nut	9443022-TR
3	3/8 x 1/2" Weld Nut	9493012
6	3/8" x 7/8" O.D. Washers	9333042
7	1/2" SAE Washers	9345002

Installation

NOTES:

(A) Use liquid thread lock (such as Loctite) with all threaded hardware that does not include self-locking nuts.

Step 1.

Locate and mark the positions of the collars on the support posts. Note distance from top of collars in Assembly View.

Step 2.

Attach collars using the hardware shown on the Collar Assembly page R3.5-09.

Step 3.

Attach the Panel to the post collar using the hardware shown in Figure 1. See page R3.5-11 for Socket Clamp Assy. hardware.

Step 4.

Attach the Counter Top to the Store Panel using the hardware shown in Figure 2.

Step 5.

Fully tighten all fasteners.

Specifications

STORE FRONT PANEL:

Shall be constructed of 3/4" thick, high-density polyethylene. The complete unit shall include a bolt-on counter top made of same plastic laminate material and attached in three places with 90° 1/4" thick steel brackets.

MOUNTING LUGS:

Shall be precision die-cast from a high strength aluminum alloy. Finished with a baked on Powder Coating.

SOCKETS CLAMPS:

Shall be two-part and precision die-cast from a high strength aluminum alloy. Finished with a baked on powder coating.

HARDWARE:

Shall be zinc/nickel plated, galvanized or stainless steel as required to resist rust and corrosion.

Maintenance

Periodically tighten all screws, bolts and nuts. A periodic inspection of all parts is necessary. If a part is broken or worn, replace immediately.